

LUBRICATION POINTS

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
-------------	----------	---------------------	---------------

Lubrication Points

1	Steering Lever Pivot	Grease	2
2	Deck-to-PTO Coupling (Grease Spline Slide Area)	Grease	1
3	Deck Support Arm Pivot	Grease	2
4	Universal Joint Tube Assembly	Grease*	1
5	FSC Lever Pivot	Grease	1
6	Hydro Idler Arm Pivot	Grease	1
7	Clutch Actuator Push Rod	Grease	1
8	Body Latch Pivot	Oil	2
9	PTO Clutch Lever Pivot	Grease	1

ITEM NO.	LOCATION	LUBRICATION TYPE	NO. PLACES
-------------	----------	---------------------	---------------

10	Clutch Arm Pivot	Grease	1
11	Transaxle Oil Reservoir	Oil	2
12	Throttle Control Cable Ends	Oil	2
13	Engine Dipstick	Oil**	1
14	Tail Wheel Caster Fork Pivot	Grease	2
15	Rear Wheel Pivot	Grease	1
16	Rear Wheel Bearing	Grease	2
17	Engine / Oil Filler	Oil**	1
18	PTO Belt Tightener Pivot	Grease	1
19	Parking Brake Pivot	Grease	1
20	Throttle Control Pivot	Oil	1

* Grease every eight (8) hours.

** Refer to MBS29 **Operator's Manual** for procedure for checking and changing oil in Engine Crankcase.

NOTE: See Model MBS29 **Operator's Manual** (P/N 2000-7) for proper lubrication intervals.

LUBRICATION POINTS

