


STEERING CONTROL ASSEMBLIES

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Steering Lever & FSC Assemblies				Transmission Spring Assemblies			
1	5862	FSC Knob	1	39	4199	Transmission Spring Assembly (Includes Items # 40-46, F004, F211, F320 & F352)	*
2	4170	FSC Lever Assembly (Includes Item # 4)	*	40	4552	Ball Joint (1/4-28)	2
3	2170-1	Step Washer	1	41	5194	Plunger Sleeve	2
4	5830	Grease Fitting	1	42	5192-2	Spring Plunger (Female)	2
5	5214-5	Ball Joint (5/16-24/LH) W/O Stud	1	43	5193	Washer (3/4 x 1 x .085)	2
6	4213	Control Rod (6-1/4)	1	44	6191	Spring Slide (4-3/4)	2
7	5214-4	Ball Joint (5/16-24) W/O Stud	1	45	5195	Compress Spring (1 x 5-1/8)	2
8	5463-2	Steering Lever Actuator	2	46	6196	Spring Slide Cap	2
9	5665-1	Compression Spring (2-1/2)	2	Fasteners			
10	2213	Control Rod (7")	2				
11	2212-3	Seal Retainer	2				
12	2212	Transmission Control Arm Stop	2				
13	2212-2	Transmission Control Arm, RH	1	F003	1/4-28 Hex Nut		2
14	5214-2	Ball Joint (5/16-24) (Nylon Lined)	2	F004	1/4-20 Keps Nut		4
15	2212-1	Transmission Control Arm, LH	1	F005	1/4-20 ESNA Nut		2
16	2451-1	Steering Pivot Shaft With Stop	1	F008	5/16-24 Keps Nut		2
17	5830-3	Grease Fitting (45 Degree)	1	F009	5/16-18 Whiz Locknut		6
18	7201-2	Fiberglide Bearing (1/2")	2	F010	5/16-24 ESNA Nut		2
19	2463	Actuator Washer	2	F024	5/16-24 Jam Nut		3
20	8201-3	Fiberglide Bearing	4	F029	1/4-20 x 1/2 Hex Bolt		2
21	2451-5	Speed Control Actuator, LH (Includes Items # 17 & 20)	1	F035	5/16-18 x 1-1/4 Hex Bolt		1
22	5146	10mm Ball Stud	4	F044	5/16-24 x 3/4 Hex Bolt		2
23	2215-5	Steering Lever Dampener	2	F059	3/8 Wave Spring Washer		1
24	2451-6	Speed Control Actuator, RH (Includes Items # 20 & 25)	1	F093	5/16-18 x 1 Hex Bolt		2
25	5830-4	Grease Fitting (90 Deg.)	1	F121	5/16-18 x 3/8 x 1 SHL Bolt		1
26	4451-4	FSC Friction Actuator	1	F146	1/4-20 Jam Nut		2
27	4219	Extension Spring (3/4 x 6-1/2)	1	F167	5/16-18 Hex Nut		1
28	5850-2	Handle Grip, Foam (5-1/2)	2	F183	.312 x .700 x .074 Washer		6
29	5453-20	Steering Lever Handle (+1") Adjustable / SS (Includes Items # 28, F188, F198 & F345)	2	F188	1/4-20 Self-Locking Nut		4
30	4452-4	Steering Lever Tube W/Tab	2	F192	3/8-24 Self-Locking Nut		1
31	5450	D-Clip	2	F198	.250 x .625 x .040 Washer, SS		2
32	5222	Extension Spring (1/2 x 3-1/4)	2	F211	1/4-20 x 7/8 Hex Bolt		3
33	4452-6	Steering Pivot (1/4-20 x 1-5/8)	2	F320	1/8 x 3/4 Split Spring Pin		2
34	4142-1	FSC Cam	1	F345	1/4-20 x .770 Knurled Bolt		4
35	5141	FSC Friction Washer (1-1/2 x 3/8 x 1/16)	1	F352	5/32 x 1 Heavy Duty Roll Pin		2
36	4142-2	FSC Friction Washer (1-1/2 x 1-1/32 x 1/16)	1	F373	5/16-24 Hex Nut, LH		1
37	9704-3	Pivot Rod Bushing, Plastic	2	F385	1/4 x 1-1/4 Roll Pin		1
38	2451-4	Steering Shaft Spacer	1	F386	5/16-18 x 1-1/2 x 3/8 Shoulder Bolt		1
				F391	1/4-20 x 1/2 Set Screw, SS		2
				F407	Belleville Washer 3/8 x 1.187, SS		1
				F427	5/16-18 Flange Nut		1
				* Service Part Only			

STEERING CONTROL ASSEMBLIES

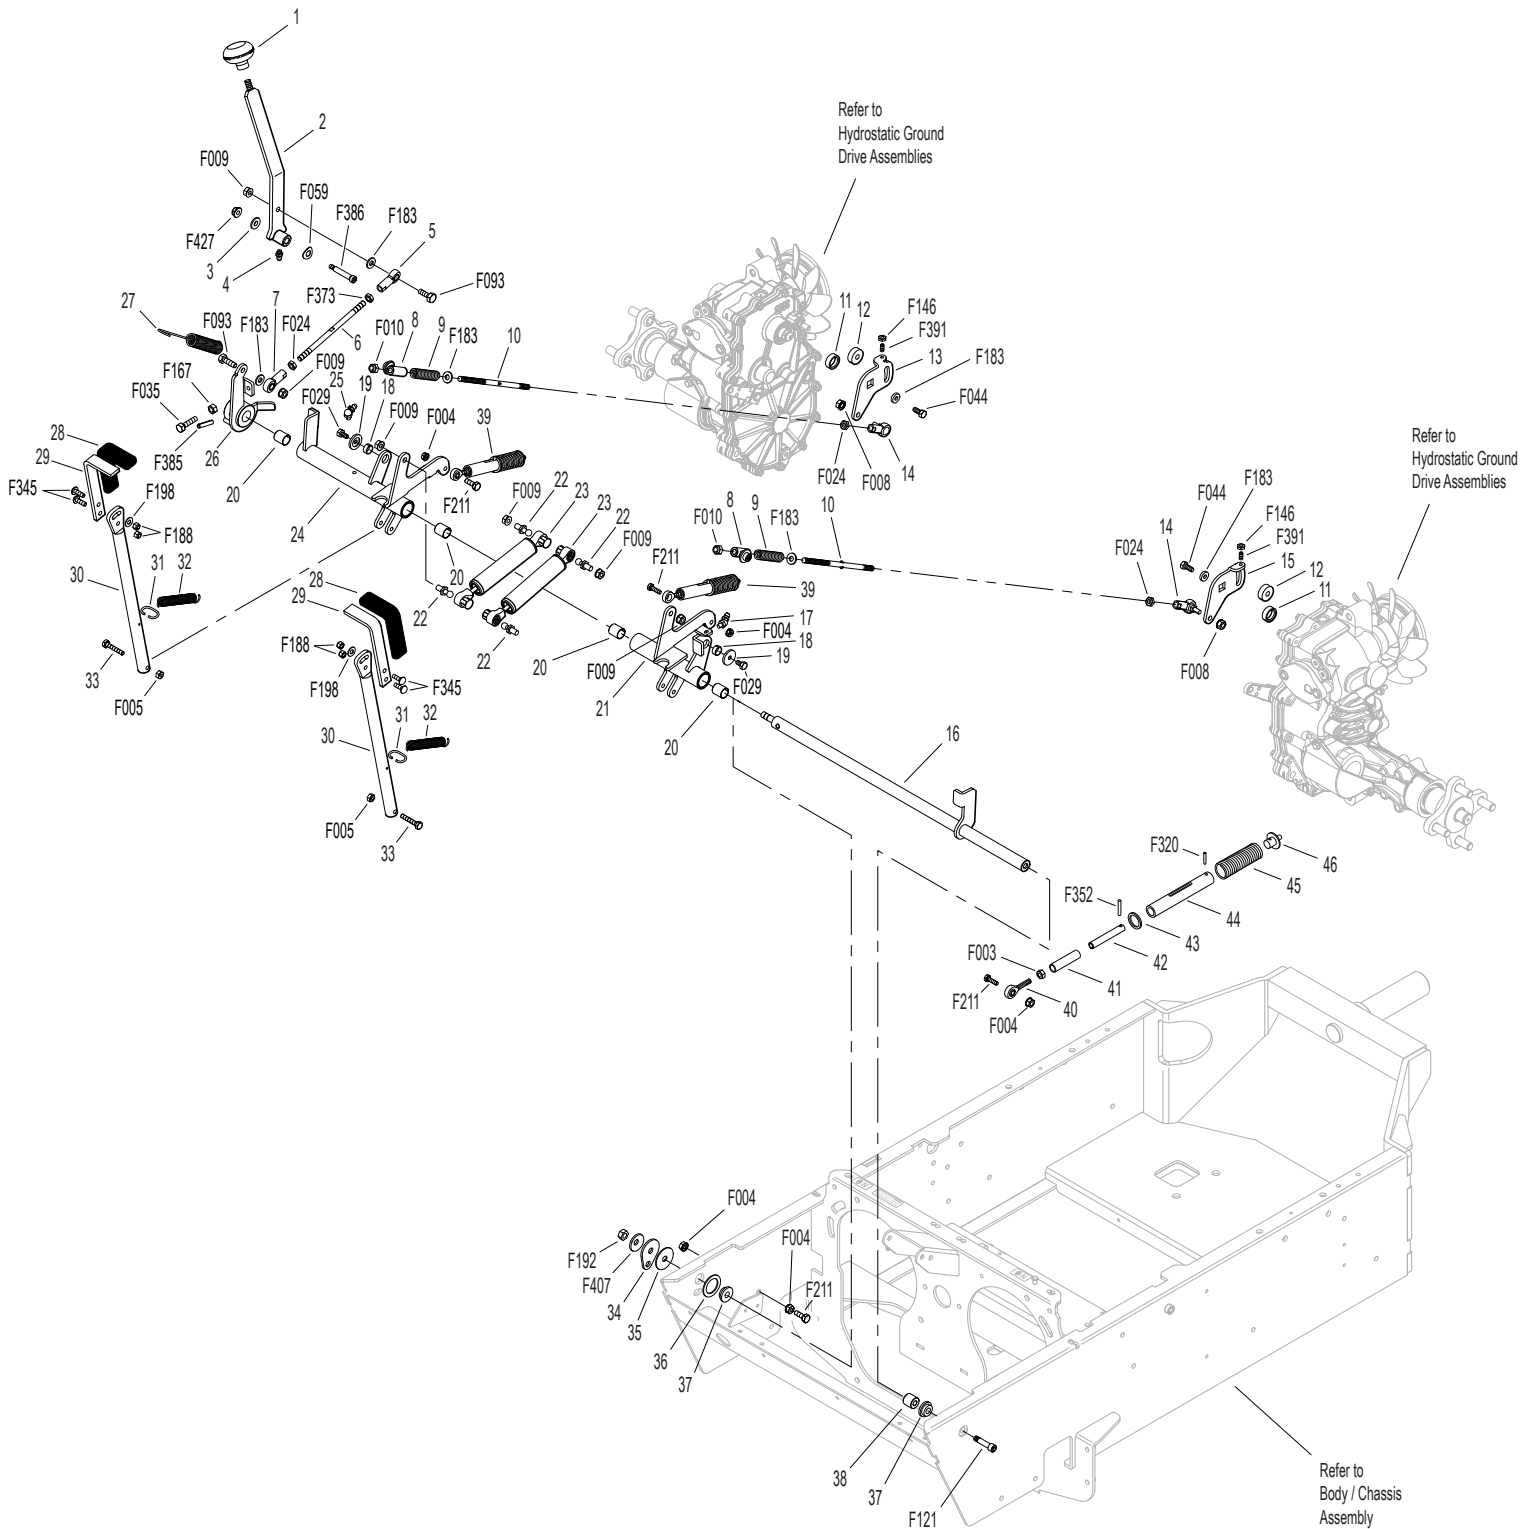

Beginning S/N 115338
 Effective Date 07-19-12
 Use only genuine **Walker®** replacement parts.