
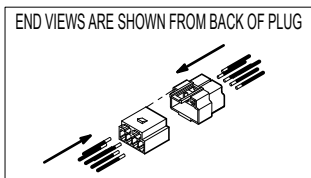


ELECTRICAL ASSEMBLY (MODEL MBS26)

ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D	ITEM NO.	PART NO.	DESCRIPTION	NO. REQ'D
Electrical Assembly				25	5933	Battery Terminal Insl., Red (+)	1
1	8960-15	Ignition Switch W/Keys (Includes Items # 2, 3 & F349)	1	26	5932	Battery Terminal Insl., Blk (-)	1
2	7854	Plastic Tip, Red	1	27	5844	Battery Hold-Down Bar	1
3	8960-3	Key Set W/Umbrella	1	28	2910-1	Battery Shield	1
4	7941-3	Boot, Circuit Breaker	1	29	5839	Hook Bolt	2
5	7941-6	Circuit Breaker (15 Amp)	1	30	8941	Circuit Breaker (30 Amp) (Auto Reset/Sealed)	1
6	8990-1	Hourmeter (Sendec)	1	31	6941-1	20 Amp Fuse	1
7	8996-2	Red Indicator Light Assembly (Includes Items # 10 & 11)	2	32	6941-3	10 Amp Fuse	1
8	8996-10	Amber Indicator Light Assembly	1	33	NS	ECU Harness Clip	1
9	8536-2	Warning Horn Assembly	1	34	NS	ECU (Kohler)	1
10	8996-4	Red Indicator Lens (Includes Items # 11 & 12)	2	35	NS	Relay (Kohler)	1
11	8996-3	Indicator Bulb (Replacement for P/N 8996-2)	*	36	NS	Fuse Holder (Kohler)	2
12	8996-6	Amber Indicator Lens	1	37	5833	Cable Clamp (1/4)	1
13	6105-3	Harness Clip	3	38	2940-6	Wire Harness, 26 EFI	1
14	2940-4	Seat Switch Harness	1	39	5942-4	PTO Safety Switch (NO)	1
15	6942	Relay Switch 30/40 Amp (NC) (Includes Items # 40 & 41)	3	40	6941-7	Relay Mount	*
16	7948-1	Time Delay Module (Less Harness)	1	41	6941-6	Relay Switch 30/40AMP	*
17	7948-5	Time Delay Harness	1	Fasteners			
18	5941-2	Safety Switch	1	F002	10-24 Keps Nut		15
19	7833-2	Cable Clamp (1 x 1/4)	2	F004	1/4-20 Keps Nut		2
20	7938	Lead Wire, Battery Charge (Alternator to Starter)	1	F009	5/16-18 Whiz Locknut		1
21	2940-3	Battery Cable (14")	2	F019	1/4-20 ESNA Wing Nut		2
22	8012-6	Regulator Adapter Harness	1	F026	10-24 x 1/2 PPHMS		13
23	7910	Battery (12V/340CCA/Dry)	1	F031	1/4-20 x 5/8 Hex Bolt		2
24	5975-1	Cable Tie (18# x 3-3/4")	2	F034	5/16-18 x 3/4 Hex Bolt		1
				F050	1/4 SAE Washer		4
				F103	10-24 x 2 PTHMS		2
				F232	10-32 Keps Nut		2
				F349	Washer .835 ID 1.122 OD, SS		1
				F459	10-24 x 2-1/4 Hex Bolt		1

* Service Part Only

ELECTRICAL ASSEMBLY (MODEL MBS26)

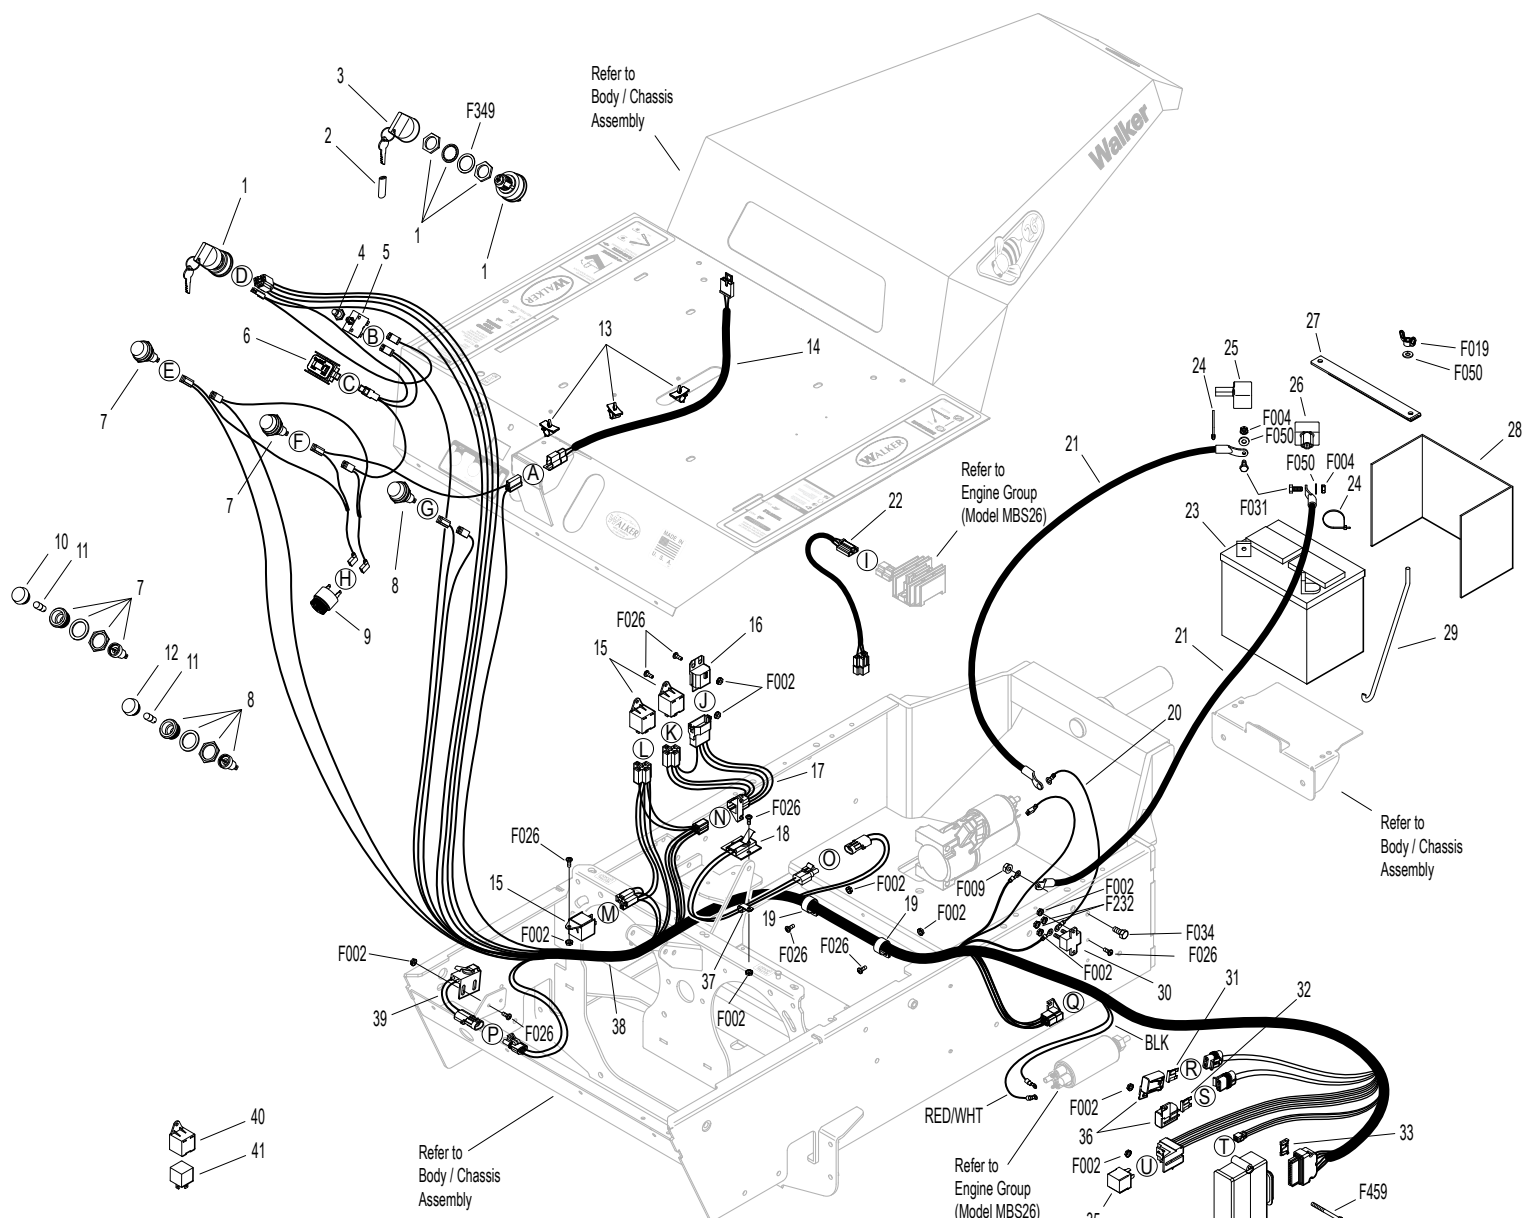

DETAIL A

PUR/RED



GRA

DETAIL B

PUR



PUR/RED

DETAIL C

BLK



PUR PUR/RED

DETAIL D

YEL



WHT

BLK BLK

PUR PUR

DETAIL E

PUR/RED



PUR/RED

GRN GRN

DETAIL F

PUR/RED



PUR/RED

BLU BLU

DETAIL G

RED/YEL



BLU

DETAIL H

BLU



PUR/RED

PUR/RED

DETAIL I

PUR



WHT

WHT

DETAIL J

GRN



BRN

GRA

DETAIL K

YEL



BRN

PUR/RED

PUR/RED

DETAIL L

YEL/BRN



YEL

PUR/RED

PUR/RED

DETAIL M

ORG



BRN

PUR/RED

PUR/RED

DETAIL N

WHT



GRN

RED

BRN

DETAIL O

BLK



BLK/BRN

DETAIL P

BLK



BLK/BRN

DETAIL Q

YEL/GRN



GRN

WHT

PUR

DETAIL R

RED



RED

DETAIL S

RED/WHT



RED/WHT

DETAIL T

BLK



RED

BLU

PUR

DETAIL U

RED



RED

RED/WHT

RED/WHT

DETAIL V

PUR/RED



BRN

WHT

WHT

Effective Date 09-15-10

Use only genuine Walker® replacement parts.